

Table of Contents

Overview

Introduction	1-1
289H LSS Overview	1-2
Scanning & Alerting Functions	1-3
Communication Options.....	1-4
Pair Diagnostic Functions	1-4
Tone Generation.....	1-4
289H-M Monitor Description	1-5
Controller Card	1-5
Utility Card.....	1-8
Relay Card	1-9
Relay Card Connections	1-11
Connector Blocks.....	1-12
Subscriber Block	1-12
Subscriber Block Auxiliary Connectors	1-14
Dedicated Block.....	1-14
289H-M Cables	1-15

Site Planning

Introduction	2-1
Before Ordering	2-1
Before Assembly	2-2
Installation Planning Form	2-4

Monitor Installation

Introduction	3-1
Unpacking Equipment	3-1
Installing the 289H-M LSS Monitor	3-2
Power Supply Hookup	3-4
Connector Block Installation	3-6

Connector Block Wiring

Introduction	4-1
Access Number Description	4-1
Subscriber Block Description.....	4-1
Wiring and Cabling Requirements	4-2
Using the Auxiliary Connectors	4-5
Wiring Procedures	4-5
Wiring Dedicated Devices to Subscriber Blocks	4-7
Connecting 289H-M LSS Monitor to a Sparton Dedicated Block	4-7
Setting Up the SPDR Relay Card	4-7

Using Sparton Adapter Cabling..... 4-9

Dedicated Block Description 4-10

 Wiring and Cabling Requirements 4-10

 Wiring Procedures 4-12

System Calibration 4-13

Start Up & Test Procedures

Introduction 5-1

289H-M Start Up 5-1

 System Check Procedures..... 5-1

 Card Testing Procedures 5-3

 Testing and Replacing a Blown Fuse..... 5-5

Setting Up the 289H LAN Controller Card 5-7

 Configuring the LAN Controller 5-8

 PressureMAP Data Entry Requirements..... 5-12

 Troubleshooting..... 5-12

 Network Information for LAN Controller Operation 5-13

 Network Configuration Worksheet 5-14

Appendix 1–Troubleshooting

Introduction A1-1

Troubleshooting A1-1

 Possible Error Conditions..... A2-1

Diagnostic Testing A1-5

289H LSS Error Messages A1-10

Appendix 2–Reading Messages

Introduction..... A2-1

 Verbose Readings for Resistive and Current Loop Devices A2-1

 Status Column Explanation A2-2

Appendix 3–Technical Notes

Introduction A3-1

Understanding How Contactors Work with PressureMAP and the 289H LSS..... A3-1

 Contactor Wiring and PressureMAP..... A3-1

 Binary Contactors A3-3

 Additional PressureMAP Contactor Readings A3-4

289H LSS Scan and Alert Cycles A3-4

Appendix 4–289H Alert Modem Status Codes

Introduction..... A4-1

Status Codes for the 289H Alert Modem A4-1

 289H Alert Modem Errors A4-2

 289H Alert Protocol Errors A4-3

State of Communication Protocol Values A4-4

 STATE Descriptions for PressureMAP A4-5

 STATE Descriptions for the 289H-M LSS A4-5

Appendix 5–289H Diagnostics

Introduction.....	A5-1
Functional Overview.....	A5-1
Types of Calls Placed Through PressureMAP	A5-2
Line Testing	A5-2
Procedures for the 289H LSS Diagnostics Test	A5-3
The 289H LSS Diagnostics Tests.....	A5-5
System Configuration	A5-6
Calibration Test.....	A5-7
Realtime Reading Test	A5-8
Resistive Device Output.....	A5-10
Current Loop Device Output.....	A5-10
Specific Device Information	A5-11
Capacitance Test.....	A5-12
Ping Relays Test	A5-13
Cold Reset.....	A5-14
Leakage Test	A5-14
AC Test	A5-15
DC Test	A5-16
Dialout Phone Number Information.....	A5-17
Device Alert Information	A5-19
Tone Settings	A5-20
Get Tone Settings.....	A5-21
Set Tone Default	A5-21
Route Tone.....	A5-22
Transducer Conversion Charts	A5-24

Appendix 6–Equipment Ordering Information

Introduction	A6-1
Product Descriptions	A6-1
Office Monitors.....	A6-2
Monitor Specifications	
289H LSS (Full Size Chassis).....	A6-6
289H-M LSS (Mini Chassis).....	A6-7
uM260 Micro Monitor	A6-9
Ordering Options / Card Compatibility	
289H LSS.....	A6-10
289H-M LSS.....	A6-11
289H LSS Components and Connector Blocks	A6-12
289H LSS Connector Cables.....	A6-20
Miscellaneous 289H LSS Accessories.....	A6-23

Index	I-1
--------------------	-----

