

# Table of Contents

## **Overview**

Introduction .....	1-1
Operational Modes .....	1-1
uM260 Capabilities .....	1-2
Scanning .....	1-2
Device Wiring .....	1-2
Monitor Components, Physical Description .....	1-3

## **Site Planning**

Introduction .....	2-1
Before Ordering .....	2-1
Before Installation .....	2-2

## **Device Organization**

Introduction .....	3-1
uM260 Access Numbering .....	3-1
Device and Transducer Types .....	3-1
PressureMAP Device Data Form .....	3-2
PressureMAP Device Data Field Explanations .....	3-4
PressureMAP Office Cutover Suggestion .....	3-8
CopperWATCH Device Data Form .....	3-9
General Information .....	3-9
CopperWATCH Device Data Field Explanations.....	3-9

## **uM260 Installation**

Introduction.....	4-1
Unpacking Equipment .....	4-1
Monitor Components .....	4-1
Setting Up the uM260 Monitor .....	4-2
Installation Kit Options .....	4-2
Cable Pressurization System Monitoring .....	4-2
Copper Cable Theft Monitoring .....	4-3
Required uM260 Installation Tools .....	4-3
Power Supply Hookup .....	4-3
Power Module Location.....	4-4
Wiring Conductors .....	4-4
Connecting Monitoring Device Pairs .....	4-5
Termination Adapter .....	4-6
100-Pair Connector Block .....	4-6
Using a Termination Adapter.....	4-6

Procedure for PressureMAP-Monitored uM260 ..... 4-7

Procedure for CopperWATCH Monitored uM260 ..... 4-8

Using a Dedicated Connector Block..... 4-9

    Mounting the Connector Block..... 4-9

    Block Wiring Description..... 4-10

    Block Pin / Cable Connector Arrangement ..... 4-11

        Recommended Pin Group ..... 4-11

    Wiring and Cable Requirements ..... 4-11

***uM260 LAN Setup Procedure***

Introduction..... 5-1

Setup Prerequisites ..... 5-1

Establishing Communications ..... 5-1

    Screen Samples..... 5-2

Server Configuration ..... 5-5

    IP Address ..... 5-5

    Gateway IP Address ..... 5-6

    Netmask Setting ..... 5-6

    Setup Completion ..... 5-8

Web Interface Test ..... 5-8

    Screen Samples..... 5-9

Telnet Interface Test ..... 5-10

***Appendix 1 – Device Data Forms***

Introduction..... A1-1

    uM260 Device Data Form (for PressureMAP) ..... A1-2

    uM260 Device Data Form, Side 1 (for CopperWATCH) ..... A1-3

    uM260 Device Data Form, Side 2 (for CopperWATCH) ..... A1-4