

# Index

289H LAN Controller Card .....	1-5—1-8, 5-1, 5-2, 5-8—5-14
(figure) .....	1-7, 5-8, A6-13
289H-M LSS (figure).....	1-5, 4-5, 5-3, A1-3, A6-3
AC voltage test.....	A1-9, A5-5
AMC flash memory .....	A5-27
Access numbers .....	4-1, A5-9, A5-10, A5-20
Alert modem status codes.....	A4-2—A4-4
Automatic calibration .....	4-13, 5-1
Binary contactors.....	A3-3
Limitations of .....	A3-3
Pair resistance readings on (figure) .....	A3-4
Wiring of (figure) .....	A3-3
Calibration test .....	A1-7, A5-8
Capacitance test .....	A1-7, A5-12
Cold reset .....	A1-8, A5-14
Communication Options.....	1-4
Components .....	1-5, 3-1
289H-M chassis .....	1-5
Controller Card .....	1-5, 1-6
Relay Card .....	1-9—1-12
Utility Card .....	1-7, 1-8
Connector block .....	1-12—1-15
Auxiliary connectors .....	1-11, 4-5
Cabling .....	1-5, 1-6, 4-9, 4-16
Auxiliary (figure).....	4-9
Connections .....	1-13, 1-15, 4-5
(figure).....	4-4, 4-5, 4-9, 4-11
to relay card (figure) .....	1-15, 1-16
Circuit connections .....	4-7
Dedicated .....	4-3, 4-10
Subscriber .....	4-2, 4-5
Installation procedure .....	3-6
Mounting positions (figure).....	3-6
Pin arrangement (figure) .....	1-13, 1-14
Wiring .....	1-12, 1-14
Dedicated pairs (figure) .....	4-11
Jumper pairs.....	4-6
Procedures.....	4-5, 4-12
Sparton dedicated block cable.....	4-9
Sparton dedicated block special cable (figure) .....	4-9

Subscriber pairs (figure)..... 4-4

Contactors, binary see Binary contactors

Contactors, status

- Pair resistance readings (figure) ..... A3-2
- PressureMAP configuration..... A3-2
- Reading messages..... A3-3, A3-4
- Resistance ..... A3-2
- Wiring ..... A3-1—A3-2
- (figure) ..... A3-1

Controller Card ..... 1-5, 1-6, 5-2, 5-7—5-14

- (figure) ..... 1-6, 1-7

DC voltage test ..... A1-9, A5-16

Dedicated transducer installation (figure) ..... 1-3

Device Alert information ..... A5-19

EPROM requirements ..... 1-11, A1-4

Error messages ..... A1-9—A1-13

Fuse location on Utility Card (figure)..... 5-6

Fuse testing and replacement procedure ..... 5-5

Installation location selection ..... 2-1, 2-2

Installation planning form ..... 2-4, 2-5

Installation tools..... 3-2

Installation service..... 2-3

LAN Controller Card..... 1-6, 5-1, 5-2

- (figure) ..... 1-7, 5-8
- Setup..... 5-8—5-14

Leakage Test ..... A1-8, A5-14

Modem check ..... A1-3

Modem, FCC regulations for ..... A1-13

Modem indicator lights (figure) ..... A1-3

Modem repair information ..... A1-13

Monitoring capacity ..... 1-2, 2-1

Network communication..... 1-4, 2-2, 5-1, 5-2, A1-2, A5-1

- Required information ..... 5-13, 5-14
- Setup..... 5-7

Open circuit detection..... 1-4, A1-7, A5-12

Pair diagnostics..... 1-4, A5-5, A5-12—A5-16

Pair realtime reading test..... A5-8

Pair resistance ..... 1-4

- Leakage test..... A5-14

Phone number verification..... A1-2, A5-17

Ping relays test .....	5-4, A1-8, A5-13
Power connection block .....	3-4
Wiring (figure).....	3-5
Power connection for Utility Card (figure) .....	3-5
Power connection procedure .....	3-4
Power and phone line test .....	5-1, 5-2
Power supply check .....	A1-1
PressureMAP and the 289H-M LSS.....	1-2—1-5
Rack installation procedure.....	3-2
Rack mounting positions (figure) .....	3-3
Reading conversion charts .....	A5-24—A5-26
Reading messages .....	A2-1—A2-2, A3-4
Realtime reading test .....	5-4, A1-6, A5-9
Realtime leakage test .....	A1-8, A5-14
Relay card check .....	A1-4
Sparton Dedicated Replacement Card (SPDR) .....	1-9, 1-11, 4-7, 4-8
Configuration .....	4-7
Specific Device Information.....	A5-11
Status codes, alert modem.....	A4-1—A4-4
Subscriber block .....	4-1
(figure) .....	4-2
Transducer installation (overview) .....	1-3
Wire wrap pins.....	4-2, 4-3
Wiring procedures .....	4-5—4-7
Subscriber conductor pairs.....	1-3, 4-2, 4-3
System configuration test .....	5-1, A1-5
Tone generation capability.....	1-4, A5-20
Tone generation controls (Diagnostics) .....	A5-20
Get Tone Settings .....	5-21
Route Tone .....	A5-22
Set Tone Default .....	5-21
Tone Utility Card.....	1-8
(figure) .....	1-9
Transducer conversion charts .....	A5-24—A5-26
Utility Card.....	1-7
(figures).....	1-8, 1-9
Utility Card fuse check.....	A1-2
Utility Card power switch (figure) .....	3-3
Verbose readings.....	A2-1
Resistive and current loop devices .....	A2-1
Status column information .....	A2-2

